




ResponseCard XR

User Guide


Editing User Data

Press **MENU**.

 1. Highlight **SETUP** (Use the **YES** button for **Down** and the **NO** button for **Up**).
2. Press **ENTER**.
3. Highlight **User Data** from the sub-menu.
4. Press **ENTER**.
5. Select **2** to edit User Data.
6. Press **1** to edit your First Name.

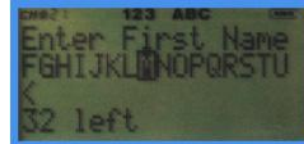

7. To choose a letter, use the **1/A** button to scroll **Left** and the **3/C** button to scroll **Right**. While the cursor is on the letter you'd like to choose, press the **SEL** button.
8. Your choice will appear on the next line in front of the > and the number of letters will decrease by 1 each time.
9. Press **ENTER** when you are finished.

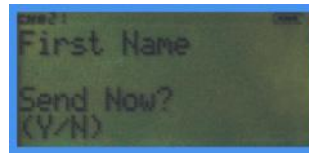

10. Press the **NO** button on your ResponseCard.
11. Select **2** to edit your Last Name.
12. Repeat steps 8 through 10.

Sending User Data

1. Press **MENU**.
2. Highlight **SEND USER DATA**.
3. Press **ENTER**.
4. The next screen will display which channel the ResponseCard is programmed to. If this is the correct channel press **ENTER**. If you need to enter a different channel number, use the numeric keys to enter your channel.
5. Press **ENTER** when the correct channel number is entered.
6. Your screen will display:
Channel Changed
Receiver Found
7. When the channel has been confirmed the ResponseCard will display:
User Data
Send Successful

Change Channel

1. Press **MENU**.
2. Highlight **Change Channel** (Use the **YES** button for **Down** and the **NO** button for **Up**).
3. Press **ENTER**.
4. The next screen will show you which channel the ResponseCard is programmed to. Use the numeric keys to enter your channel.
5. Press **ENTER** when the correct channel number is entered.
6. Your screen will display:
Channel Changed
Receiver Found

ResponseCard XR


1. ResponseCard® XR



2. ResponseCard® Receiver




3. ResponseCard® XR LCD Screen

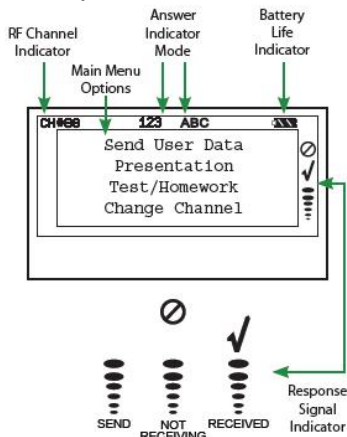


Sending Responses in Presentation Mode

* To be used during a live presentation when the speaker wants immediate feedback from the audience.

1. Press **MENU**.
2. Highlight **Presentation** (Use the **YES** button for **Down** and the **NO** button for **Up**).
3. Press **ENTER**.
4. Your screen will display the following:

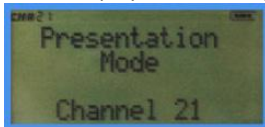

5. Press the button on the ResponseCard that corresponds to your answer choice.
6. Your answer can be verified on the screen after you make your selection.

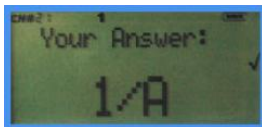

A check mark will appear on the right-hand side of your screen confirming your answer was received.

NOTE: If you receive a message stating: "Not accepting answers!" this means that polling was closed and you may not have answered the question. If a response was sent before polling closed, then TurningPoint will accept the last successfully transmitted answer.




ResponseCard XR

User Guide

Creating a Test / Homework Assessment

Press MENU

1. Highlight **Test/Homework** (Use the **YES** button for down and the **NO** button for up.)
2. Press **ENTER**
3. Press **1** for New Test
4. Use the number keys to enter a value and Press **ENTER** once you have entered the test version number.
5. The ResponseCard will prompt you to verify you have entered the correct information.
6. Select **YES**.
7. You are now in the Test/Homework screen
8. Use the **Ans Mode** button to select the answer mode required for the question. The selected answer mode will display at the top of the screen. (The answer modes that are used for each question can be found in table 1).

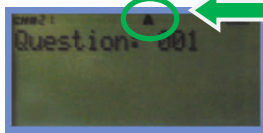


Selected Answer mode

9. Enter the corresponding answer to the test/homework questions. You will receive confirmation that your answer is being stored.
10. Repeat steps 9 and 10 until all of the questions are answered. (The maximum number of answers that can be stored is 100.)

You can use the **YES** and **NO** buttons to navigate through saved questions and answers in order. You can also use the **Go To** button to skip to a specific question. Simply press **Go To** on the ResponseCard then enter the 3-digit question number, example 004.

11. Press **MENU** when you have completed the assessment.
12. You will be prompted to leave Test Mode. Choose **YES** or **NO**

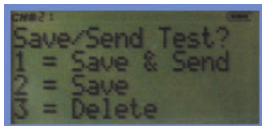


Select **1** to save and submit the assessment immediately.
Select **2** to save the assessment and transmit at a later time.
Select **3** to delete the test.

Submitting a Saved Test/Homework

1. Press **MENU**.
2. Highlight **Test/Homework** (Use the **YES** button for **Down** and the **NO** button for **Up**).
3. Press **ENTER**.
4. Press **2** for "Manage Test".
5. Use the **YES** button to scroll down and select your test.
6. Press **ENTER** when the test you want to edit is highlighted.
7. Press **1** to "Send Test".
8. You will receive confirmation that your test has been submitted.

Editing a Test/Homework Assessment

1. Press **MENU**.
2. Highlight **Test/Homework** (Use the **YES** button for **Down** and the **NO** button for **Up**).
3. Press **ENTER**.
4. Press **2** for "Manage Test".
5. Use the **YES** button to scroll down and select your test.
** You cannot edit a test if the version number is three digits and starts with "1".*
6. Press **ENTER** when the test you want to edit is highlighted.
7. Press **3** to "Edit Test".
8. You can now use the **YES** and **NO** buttons to scroll through your test. You can also use the **Go To** button on the ResponseCard.
 - A. Press the **Go To** button.
 - B. Enter the 3-digit question number, example 004.
9. To change the answer of the question you selected, press the button on the ResponseCard that corresponds to your new answer choice.
10. Once all of your changes are made, press **MENU**.
11. You will be prompted to leave Test Mode. Choose **YES** or **NO**.
12. The following options will be displayed on the screen.

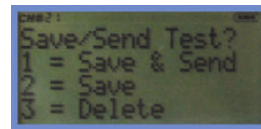

Select **1** to save and submit the assessment immediately.
Select **2** to save the assessment and transmit at a later time.
Select **3** to delete the test.

XR Answer Modes for TestingPoint

| Question | Answer Mode |
|--------------|-------------|
| Multiple | 1 or A |
| Multiple | 123 |
| Matching | 123 |
| Short Answer | 123 ABC |
| True/ False | 1 or A |
| Numeric | 123 |
| Fill in the | 123 ABC |
| Essay | 123 ABC |

Table 1 – Answer modes

The Setup Menu

User Data – from this sub-menu you can View, Edit and Send User Information.

Contrast – from this sub-menu you can adjust the Contrast using the **YES** button for a lighter screen and the **NO** button to make your screen darker.

Unit ID – This is the device ID.

Version – From this sub-menu you can see which version of the ResponseCard XR Firmware that you currently have loaded.

Contact Us

Freecall within Australia: 1800 463 279

International: +61 7 3440 8000

Email: support@keepad.com